


INSTRUCTION MANUAL

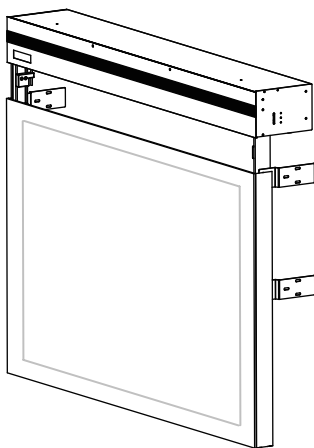

Electric Intelligent Lifting Dressing Mirror
(TSA/No cabinet)

USER MANUAL

Safe Use Instructions

- 1.The company shall not provide after-sales service for faults caused by modifying the product.
- 2.Do not replace the original adapted power supply to avoid short circuit and burning of the product.
- 3.Do not rinse the whole product with water to avoid short-circuit failure.
- 4.Do not forcefully block the cabinet door during lifting and lowering to avoid damaging the components;
- 5.To test the machine, please first remove the rubber slider of the guide rail before operation.
- 6.Please keep the guide rail straight and not deformed during installation to avoid affecting lifting;
- 7.This product is heavy and contains glass. Please install it with the cooperation of a companion;
- 8.Use the product in accordance with the instructions in this manual and do not operate it blindly;



Installation Video

Basic Parameters

Input Voltage: 100-240V

Rated Power: 72W

Output Voltage: 12V

Cabinet width dimension: 800/900/1000/1200mm

Cabinet height dimension: 700mm

Mirror height: 560mm


Material: Aluminum alloy+Mirror

Light color temperature: 4000K

Descent Time: 8s

kfi-Collision Function: Yes

Fatigue Test: 30,000 times

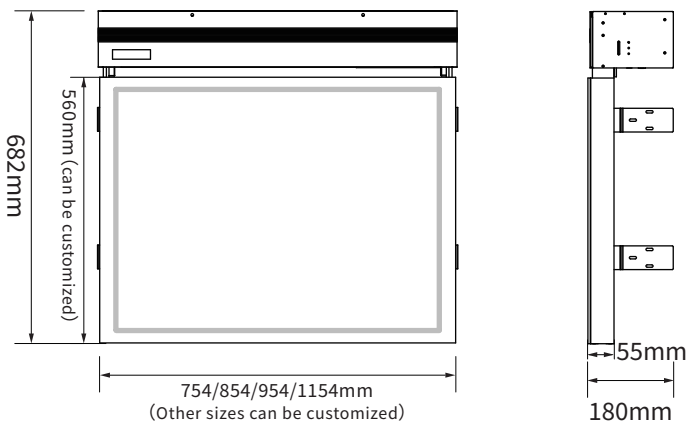

After-sales Warranty Card & Troubleshooting Guide

Common Failures and Causes Analysis

Solutions


- No response upon startup/No power ————— Socket energized
- Running light off/adaptor protection ————— The slide rail has no foreign matter
- The bottom protrudes a lot when lifted up ————— Adjusting the cabinet size

Warranty Regulations:

- 1. Warranty Period: 5 years (from the date of purchase)
- 2. Warranty scope: electrical system and motor parts and accessories.
- 3. Damage or destruction of parts caused by non-compliance with the operating instructions will not be warranted.
- 4. Unauthorized modification or replacement of other brands of parts, resulting in motor burnout will not be warranted.

Users information	Product information	Purchase Date	Warranty Records
Name:	Size:	_Y _M _D	Warranty 01
Name:	Size:	_Y _M _D	Warranty 02
Name:	Size:	_Y _M _D	Warranty 03
Name:	Size:	_Y _M _D	Warranty 04


Product Component Diagram

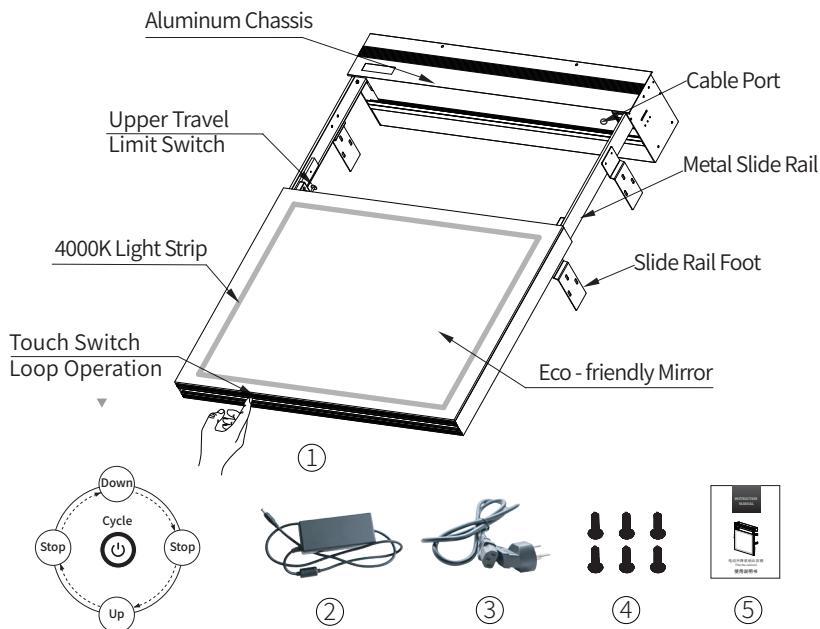


NO.	①	②	③	④	⑤
Name	Dressing Mirror Body	Adapter	Power Cable	Self-tapping Screw	User Manual
Pcs	1	1	1	1	1

Installation Instructions

1. First, loosen the four nuts on the front and back, then open the chassis panel;

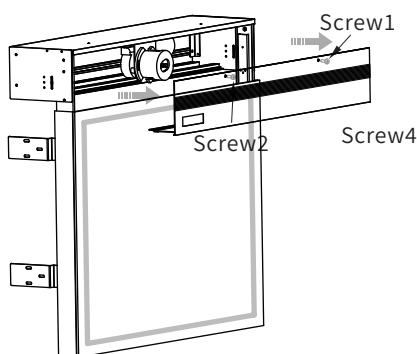


Loosen the front nuts

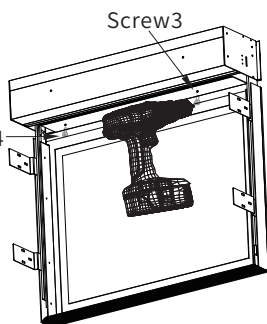

Loosen the back nuts



2. Align the dressing mirror properly, fit it into the cabinet, and lock the top nuts;

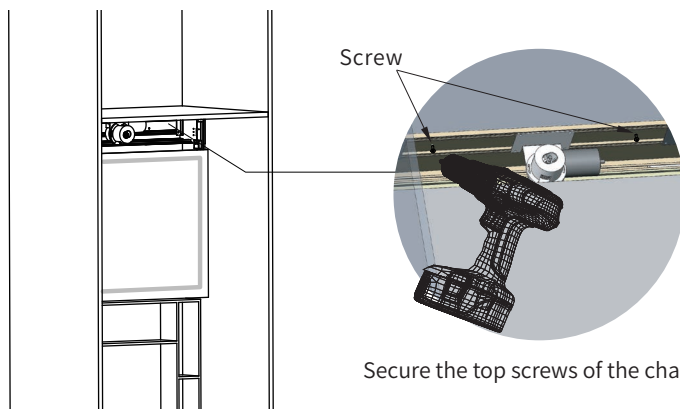


Secure the top screws of the chassis

Installation Instructions

3. Power on, touch the bottom switch to lower the mirror, then unplug ;

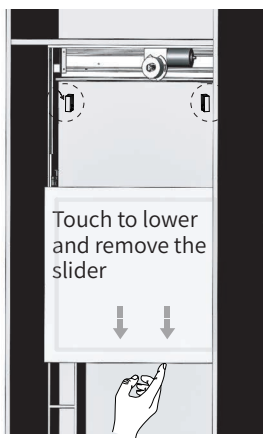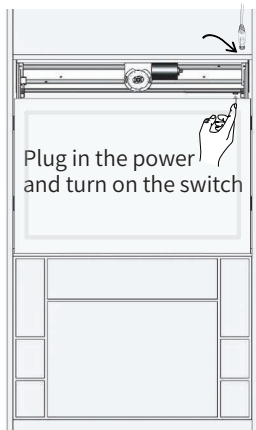


4. Lock left/right screws panel, reconnect power to test mirror;

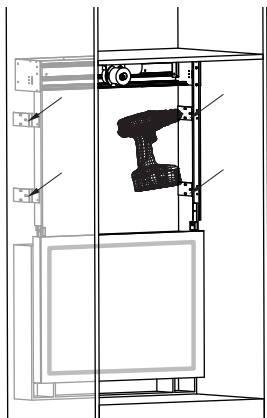

Cabinet Size Parameters

TSA Dressing mirror cabinet drawing: 1000 outer width
× 700 height; other dimensions for reference;

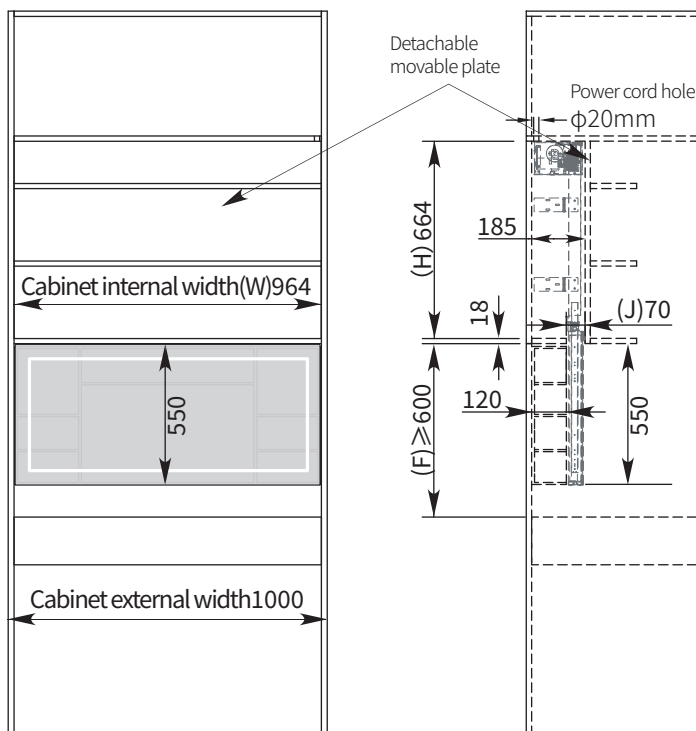

Internal width of the cabinet(W)	Internal height of the cabinet(H)	Mirror gap(J)	Reserved height for descent(F)	Power cord hole
W=764	H=664MM	≥70MM	≥600MM	φ20MM
W=864	H=664MM	≥70MM	≥600MM	φ20MM
W=964	H=664MM	≥70MM	≥600MM	φ20MM
W=1164	H=664MM	≥70MM	≥600MM	φ20MM